

Cotton Candy Machine Instructions

Requirements:

Machine must be operated on a level surface.

Machine must be properly grounded to prevent electric shock

Do not plug into a low voltage extension cord.

Requires 15 amps

Our Machines are designed to be operated with Floss Sugar. If you use your own sugar mix, we cannot guarantee the results.

Set machine on level surface.

Pull handle forward or turn screws on top side of machine to “unlock” spinner head

Install Floss Stabilizer with included clips to cotton candy pan.

Place pan on top of machine with spinner head going through the hole on the pan.

Air space is required between the pan and stabilizer for proper operation.

Must return stabilizing mesh and clips.

***Make sure handle is all the way down with floss head “unlocked” before you turn on the power or screws on side are turned to open. This unlocks the spinner head to allow it to spin properly. Not unlocking the spinner head will result in damage to the machine.

Improper use of the machine could result in additional fees. ***

Add Floss Sugar to the floss head. **Do NOT overfill** - no more than 90% full

Turn on Power Switch

Turn on Motor/Candy Switch

The head will start to turn and heat up. After about 45 seconds, the machine will start to make cotton candy. Use a cotton candy cone to spin sugar onto the cone. When the spinner head becomes low on sugar, turn off Motor/Candy Switch. This will start the cooling cycle on the machine: the head will stop spinning once it’s cooled down.

When the spinner head is stopped, re-fill with sugar, turn on Motor/Candy switch to make more cotton candy. Or if you are finished making cotton candy, let spinner head come to a complete stop after cooling and turn off Power switch.

Returning your Machine:

Wipe out pan and clean off cotton candy residue from mesh and clips.

Do not attempt to clean out the stabilizer head or get machine close to water.

Return Cotton Candy machine, pan, stabilizer and clips.

Do not transport machine on its head or side. Keep handle or screws on side tightened during transport.

Contact Art Pancake’s Party and Wedding Rentals for questions or if you experience any problems with your machine rental.

_____ Received instructions _____
Date