

# VocoPro Karaoke System

## Unit #1

### Safety First:

Do not get wet or use in wet conditions

Do not block any ventilation openings - keep fan clear

Use grounded plug/outlets and avoid using during lightning storm without proper surge protection in place

Be careful when loading and unloading unit.

Use provided wheels for transport – be mindful that it does tip over or fall

### Set-Up Unit

Karaoke system comes with cords needed for basic operation.

Power Cord – plug into grounded outlet

Microphone Cords and two Microphones

RCA Cable – to hook monitor/TV to the karaoke system to show lyrics

Make sure system is set to proper mode of use, for example, if using Karaoke DVDs, put unit on DVD input. If using alternate method, such as USB or hooking up a laptop, turn input method to proper use.

Once all cords are in place, turn on karaoke system and insert DVD or input method

Adjust volume as needed.

### Return

Once finished with unit, turn off and unplug.

Please place all cords back in the bags they came in and place in provided canvas bag with DVDs and the cases/lyric sheets.