

VocoPro Karaoke System

Unit #2

Safety First:

Do not get wet or use in wet conditions

Do not block any ventilation openings - keep fan clear

Use grounded plug/outlets and avoid using during lightning storm without proper surge protection in place

Be careful when loading and unloading unit.

Use provided wheels for transport – be mindful that it does tip over or fall

Set-Up Unit

Karaoke system comes with cords needed for basic operation.

Power Cord – plug into grounded outlet

Speaker Cords – plug top machine into bottom speaker set (4' Red and White Connectors)

RCA Cable – to hook monitor/TV to the karaoke system to show lyrics

Wireless Receivers and Two Wireless Remotes – hook receivers into back of machine and adjust volume on the back and front of the unit. Turn off microphones when not in use. Uses 9V batteries

Make sure system is set to proper mode of use, for example, if using Karaoke DVDs, put unit on DVD input. If using alternate method, such as USB or hooking up a laptop, turn input method to proper use.

Once all cords are in place, turn on karaoke system and insert DVD or input method

Adjust volume as needed.

Return

Once finished with unit, turn off and unplug.

Please place all cords back in the bags they came in and place in provided canvas bag with DVDs and the cases/lyric sheets. Make sure microphones are turned off and the receivers are handled carefully.