

# OPERATING INSTRUCTIONS

## Controls and their Functions

### LIGHT AND WARMER SWITCH


Turns on the heat to the bottom corn pan and heat light.

### KETTLE MOTOR SWITCH

Turns on the motor which drives the kettle agitator.

### KETTLE HEAT SWITCH

Supplies power to the thermostat controlled kettle.

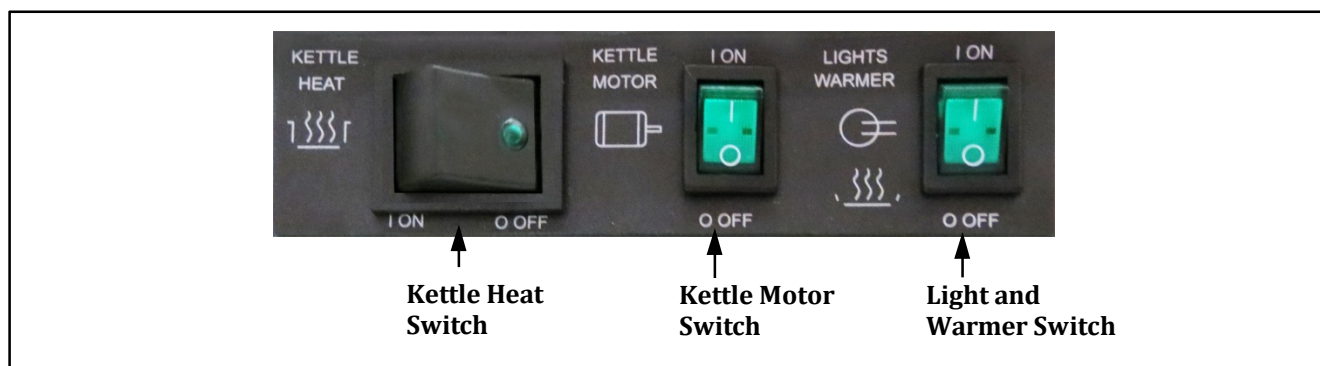

## Amount of Popcorn and Oil

Your new Popper is equipped with a corn measuring cup. Popcorn popped in coconut oil stays fresher longer. Coconut oil does not leave black deposits in your kettle like other oils.

**Corn charge** – 8.0 oz.

**Oil charge** – 2.0 oz.

**Flavacol** – 1 tablespoon

## Popping Instructions

1. Turn the Kettle Heat and Kettle Motor Switch on.
2. Make a test pop with 3 kernels of corn and 2.0 oz. of oil.
3. Turn on the kettle and let it pre-heat for 5 to 8 minutes.
4. Load pre-measured popcorn and oil into kettle.
5. When corn has finished popping, dump the kettle.
6. Repeat cycle starting with #4.
7. Turn kettle heat and motor off when finished popping corn.